













BACK VIEW

NO	Part	Qty	DESC
L		1	FRAMES
R		1	FRAMES
B		2	REAR CROSSBAR
C		1	FRONT CROSSBAR
D		2	SCREW SHORT
E		2	SCREW LONG
F		4	BOLT
G		1	TOP CROSSBAR
H		1	SLING
J		1	CUSHION




STEP 1

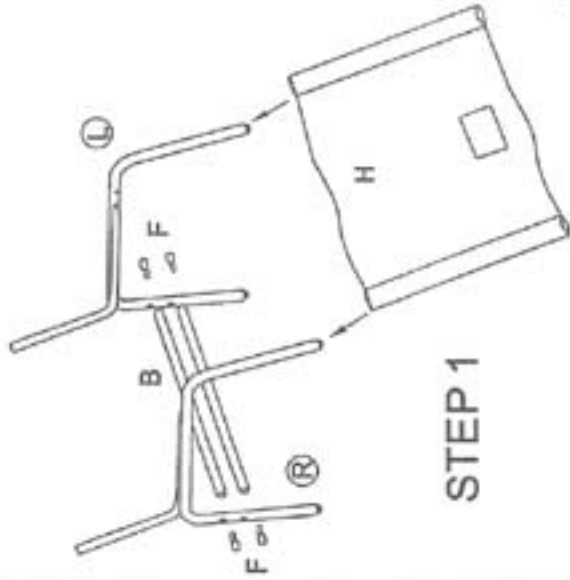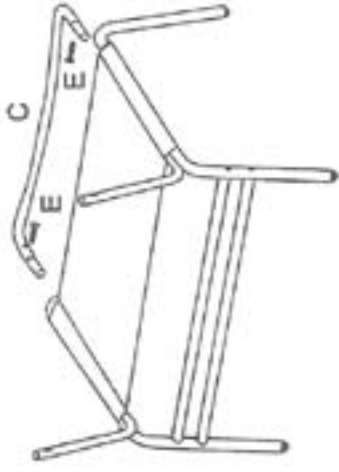

STEP 2

1. Attach REAR CROSSBARS (B) with BOLTS (F). Slide SLING (H) over FRAMES (marked L & R). "Hook and Loop" strip faces up and to the front.
2. Slide SLING (H) back on FRAMES to expose screw holes at front of FRAMES. Push on FRONT CROSSBAR (C, curve in crossbar faces down). Attach with SCREWS LONG (E).
3. Slide CUSHION (J) sleeves over backs of FRAMES and push down until screw holes at top of FRAMES are exposed. Push on TOP CROSSBAR (G, curve in crossbar faces to the rear). Attach with SCREWS SHORT (D). Pull CUSHION up and fit pockets over TOP CROSSBAR. Align "Hook and Loop" strips on bottom of CUSHION and top of SLING.

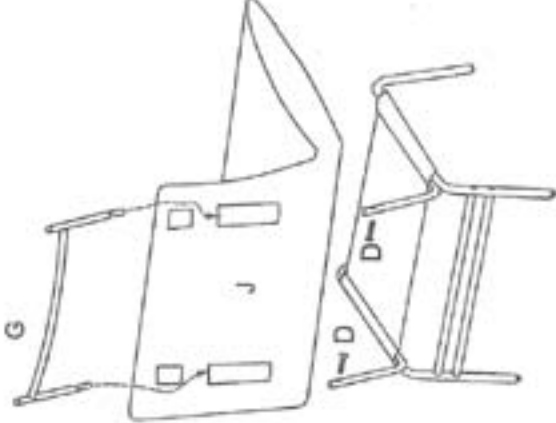

STEP 3

CLEANING INSTRUCTIONS: Spot Clean CUSHION with upholstery cleaner. Clean FRAME with damp cloth.

US & FOREIGN PATENTS PENDING

design dadagoboi